



BMS ENABLE (ON/OFF) / contact A  
 BMS ENABLE (ON/OFF) / contact B  
 BOOST ENABLE (ON/OFF) / contact A  
 BOOST ENABLE (ON/OFF) / contact B  
 (all switches are 0V connections, no voltage or current should be applied to these contacts)

BMS FAULT / contact A  
 BMS FAULT / contact B  
 (10 mA / 24V DC contact rating)  
 (contact A - Vcc; contact B - ground)

NOTES:  
 \* we reserve the right to make modifications to the current wiring diagram without any prior notice  
 \* local installation and wiring must be made by qualified personnel only (if in doubt, ASK)

DESCRIPTION: Eco-TF controller layout SITE WIRING DIAGRAM		<h1>Eco-Airvent</h1>	
DO NOT SCALE DRAWING	MATERIAL:	DWG NO. ECO-TF / 07.2016.	rev B
DATE: 15/07/2016	SCALE: NTS	SHEET 1 OF 1	